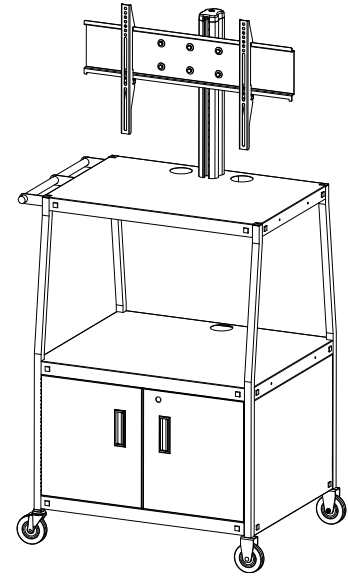


FPBBULC32
**FLAT PANEL WIDE BODY
CART WITH CABINET**


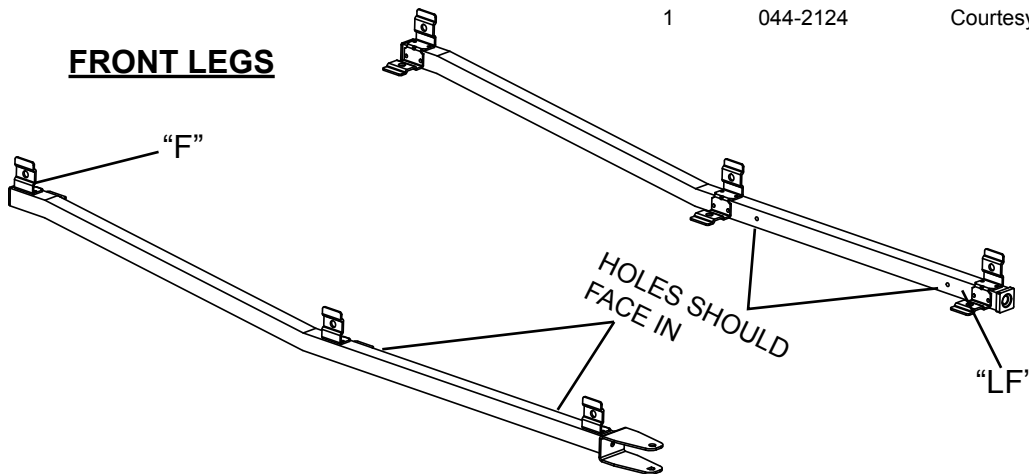
WARNING: This cart is intended to support TV monitors up to and including 65 lbs. The use of a TV monitor weighing more than that may result in instability causing possible injury.

PARTS LIST


Qty	Part#	Description
1	022-1551	Right Front Leg Assembly
1	022-1499	Left Front Leg Assembly
1	022-1552	Right Rear Leg Assembly
1	022-1501	Left Rear Leg Assembly
1	022-2811	Top Shelf
1	022-2828	Middle Shelf
1	010-1910	Bottom Shelf
2	010-1908	Side Panels
1	010-1909	Rear Panel
1	022-1415	Right Door Assembly
1	022-1416	Left Door Assembly
1	022-2825	Handle Assembly
1	010-5117	22" Pole w/ (2) Locking Tabs 010-5048
1	010-5653	Nugget
1	010-4958	Box Swivel
1	010-4959	Swivel Bracket
1	010-4954	Main Support Bar
2	010-4953	Hook Bars
2	010-4956	Stop Brackets
2	015-0002	4" Stem Casters w/o Lock
2	015-0079	Black Comet Wheels
1	012-0753	Pole Top Cap
1	E UNIT	Electrical Unit (For FPBBULC32-E4BK ONLY)
1	ES	Electrical Unit (For FPBBULC32-M4BK ONLY)

HARDWARE LIST

Ref	Qty	Part#	Description
AA	22	030-0300-10T	5/8" Square Head Bolts
BB	24	030-0002	5/16-18 Hex Serrated Nuts
CC	2	030-0388	5/16-24 x 1.732" Bolts
DD	2	030-0389	5/16-24 Lock Nuts
EE	2	030-1349	5/16-18 x 3/4" Hex Hd Screws
FF	2	030-0402	10-32 x 5/8" Combo Screws
GG	2	030-0357	10-32 Serrated Flange Nuts
HH	1	030-1129	5/8-11 UNC x 1 3/4" Socket Screw
II	1	030-1217	1 3/4" Diameter Washer
JJ	4	030-0200	1/4-20 X 1" Hex Hd Machine Screws
KK	4	030-0240	1/4" External Lockwashers
LL	10	030-0307	5/16-18 x 5/8" Hex Hd Screws
MM	8	030-0306	1" x 21/64" x 1/16" Washers
NN	10	030-0411	5/16-18 Serrated Nuts
OO	4	030-0713	3/8-16 x 5/8" Button Cap Screws
PP	2	030-1340	1/4-20 x 2" Hex Hd Bolts
QQ	2	030-0043	#10-1/4" Washers
RR	4	030-0865	#6 x 1/2" Button Pin-In Hd Screws
SS	2	030-0354	10-32 x 1 1/2" Button Sockets Screws
TT	1	012-0761	Plastic Clips
UU	1	010-1188	Door Stop
VV	2	030-0023	#6-32 x 3/8" Round Hd Machine Screws
WW	2	030-0024	#6-32 Hex Nuts
XX	2	012-0286	Plastic Handles
YY	4	030-0259	#10 x 1/2" Phillips Pan Hd Screws
ZZ	4	030-0325	1/4-20 x 1/2" Combo Truss Hd Screws
	1	010-1106	Hex Wrench
	1	030-1237	1/2" Allen Wrench
	1	030-1352	1/8" Security Pin-In Driver Bit
	1	044-2124	Courtesy Monitor Hardware Pack


FRONT LEGS

STEP 1

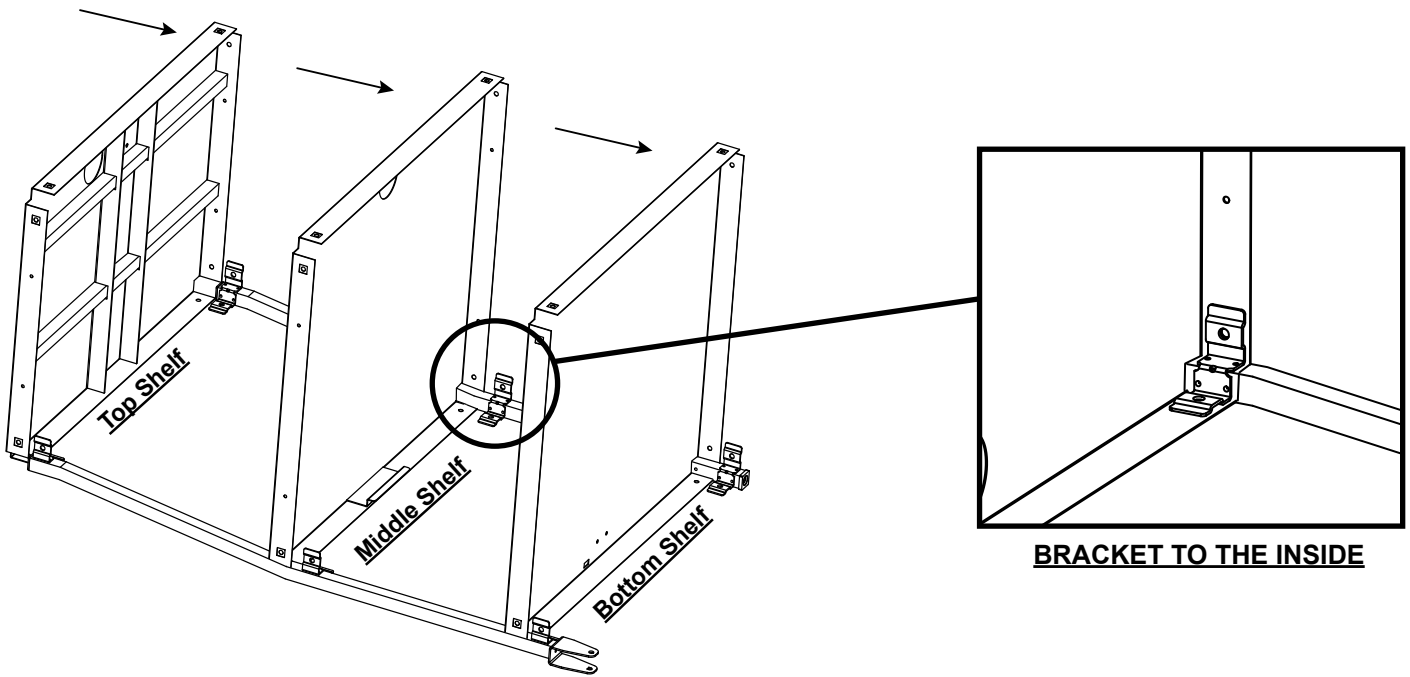Position the front legs with brackets facing up and in as shown.




STEP 2

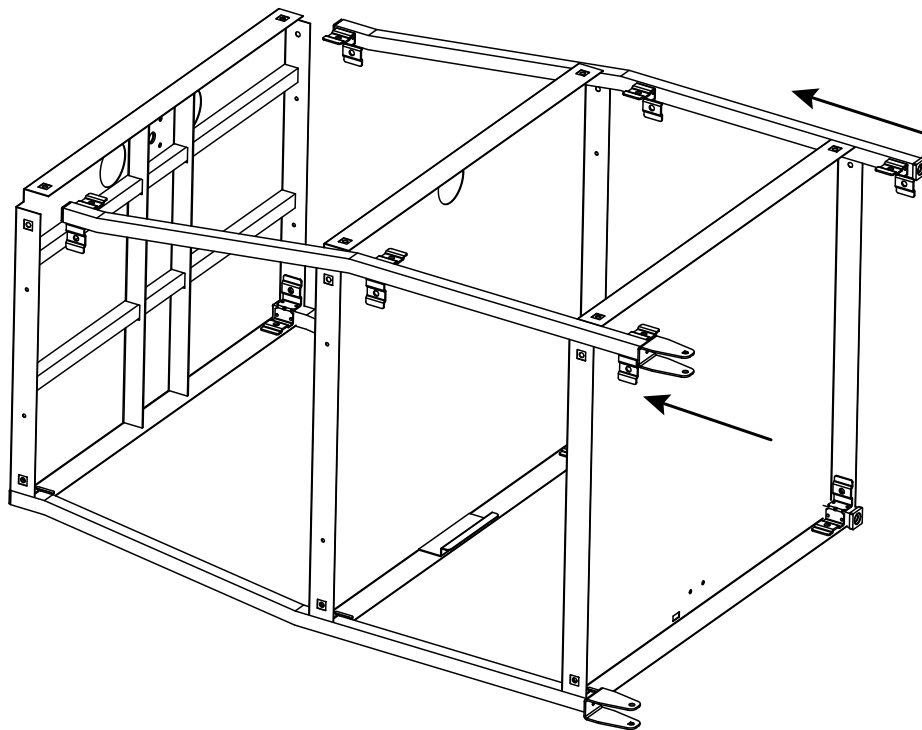Slide each shelf onto the legs positioning the reinforced shelf with 2 grommet holes at the top. Make sure the brackets are inside the shelves as shown.



STEP 3

Slide the 2 remaining legs onto the shelves as shown. Make sure the brackets are inside the shelves.

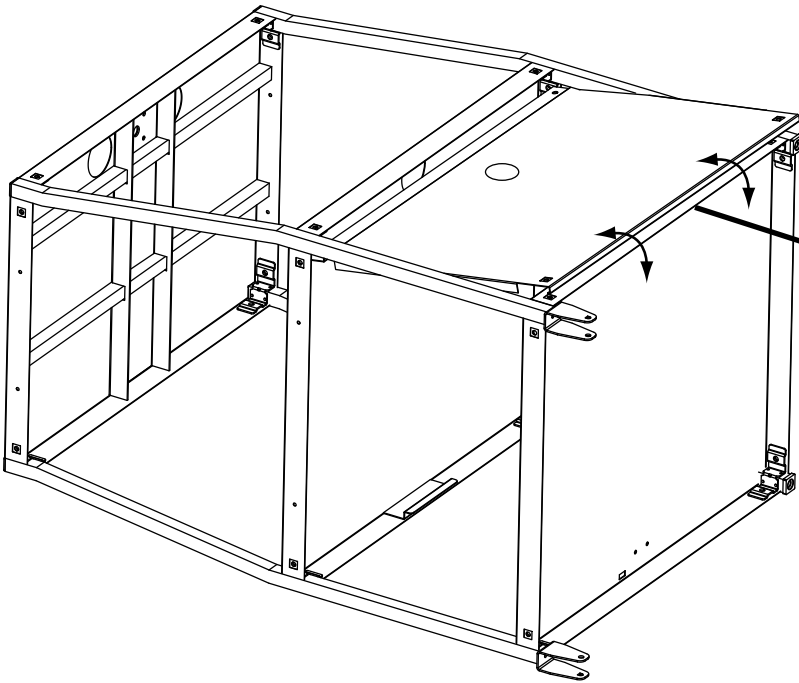

Slide rear panel under middle shelf and hook flange under bottom shelf.

FIGURE 1


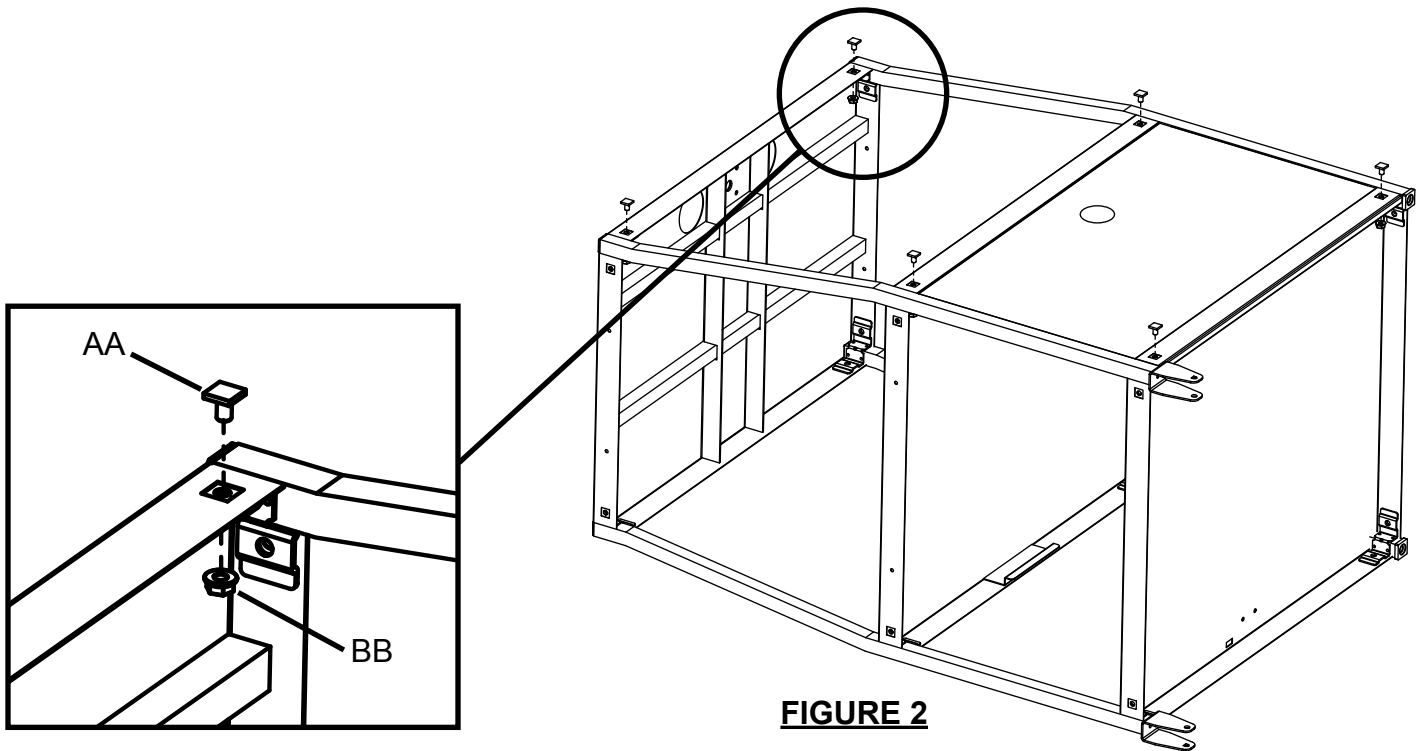


FIGURE 2

STEP 4

Slide the rear panel under the middle shelf and hook it's bottom flange under the bottom shelf as shown in **FIGURE 1**. LOOSELY attach each corner of the shelves **as indicated** in **FIGURE 2** with bolts (AA) and nuts (BB).

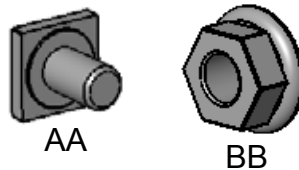


AA

BB

Slide side panel under middle shelf and hook flange under bottom shelf.

FIGURE 3

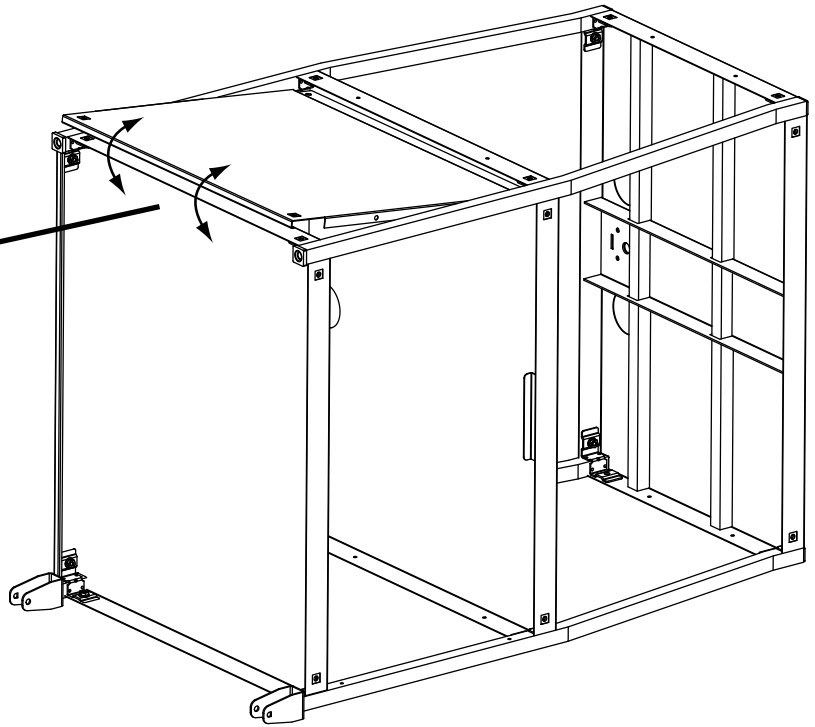

These 2 corners are for the handle. **DO NOT** install bolts (AA) for this side **ONLY**. **DO** install the bolts on the other side.



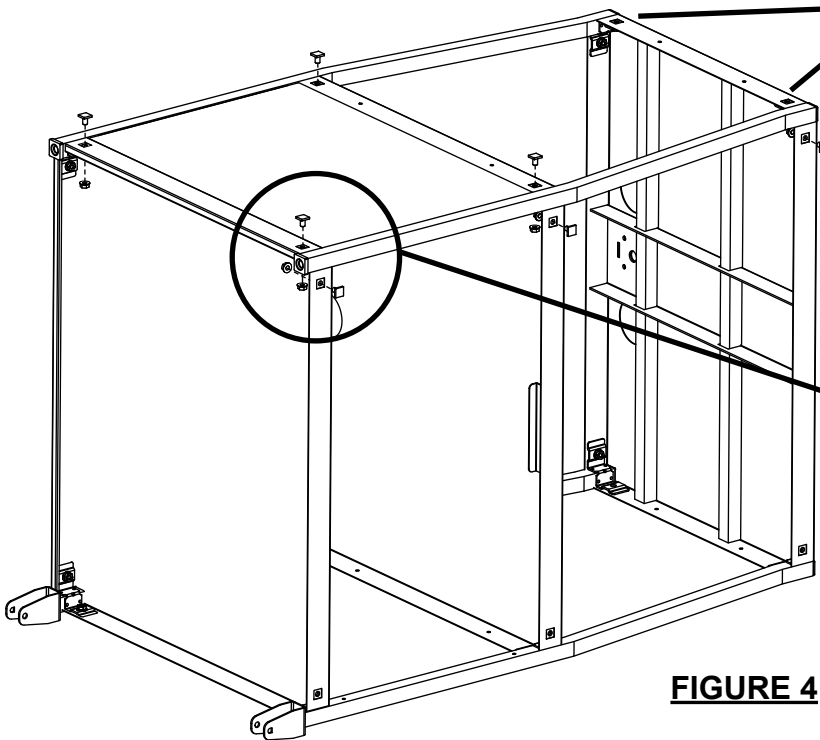


FIGURE 4

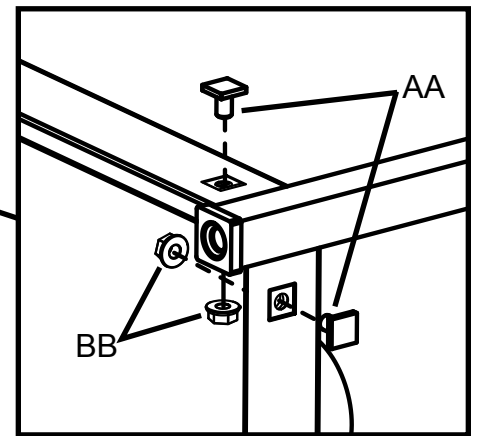


STEP 5


Slide the side panel under the middle shelf and hook it's bottom flange under the bottom shelf as shown in **FIGURE 3**. LOOSELY attach each corner of the shelves as indicated in **FIGURE 4** with bolts (AA) and nuts (BB).

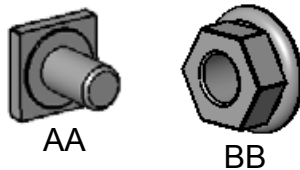

TURN CART OVER AND REPEAT THIS STEP ON THE OTHER SIDE. THEN TIGHTEN ALL HARDWARE ON ALL SIDES.

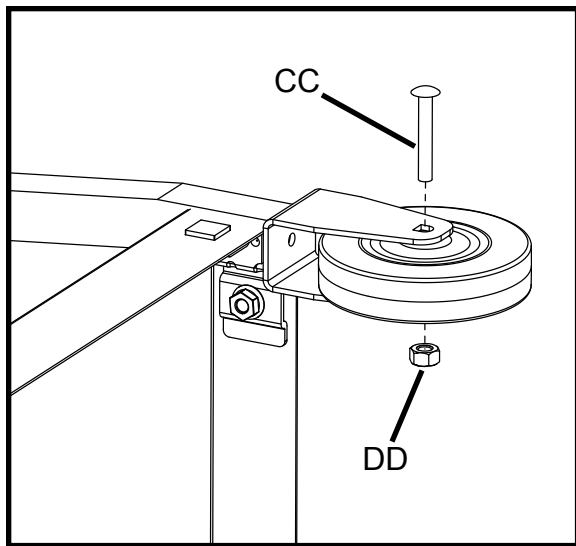



RIGHT LEGS
FIGURE 5

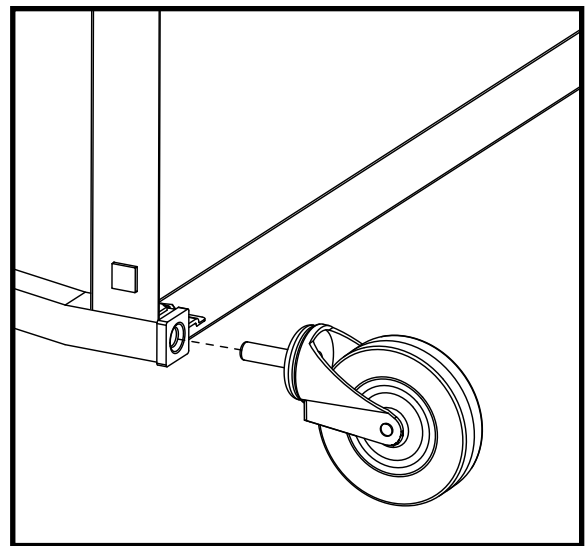

LEFT LEGS
FIGURE 6


STEP 6


Attach each caster wheel to the right legs with screw (CC) and nut (DD) as shown in **FIGURE 5**. Push each stem caster into the sockets on the left legs as shown in **FIGURE 6**. To ensure casters are securely in the sockets, a rubber mallet may be used to tap them in place. Once both casters are installed, stand unit upright.

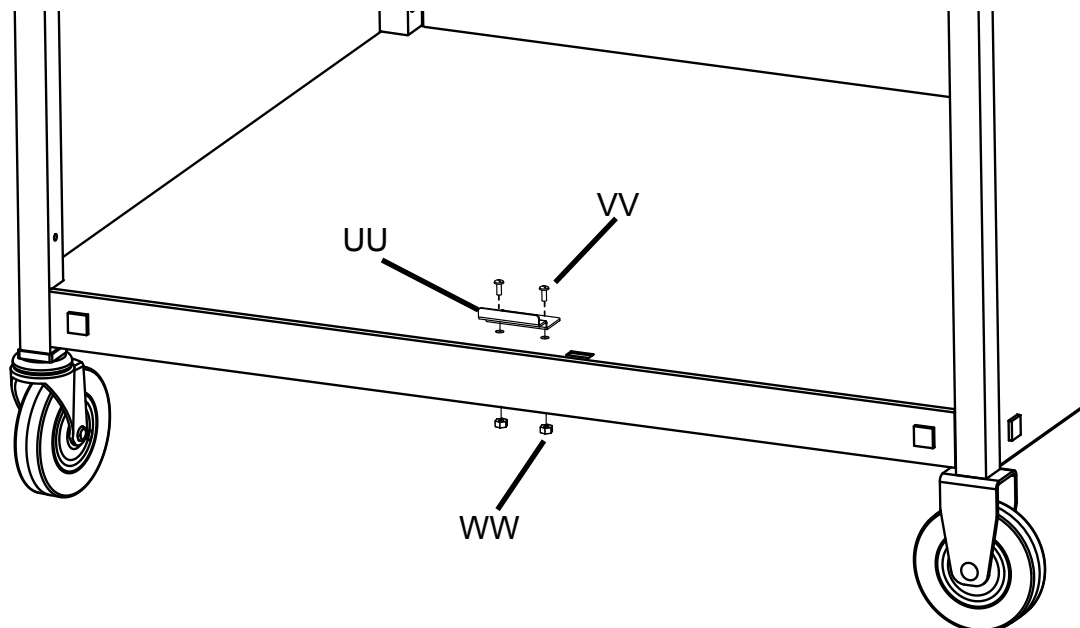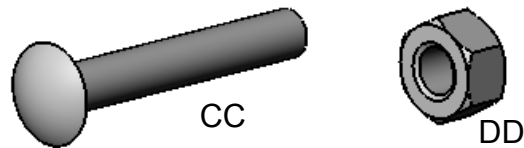

STEP 7



Attach door stop (UU) to bottom shelf using screws (VV) and nuts (WW) as shown.

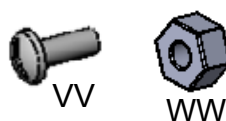

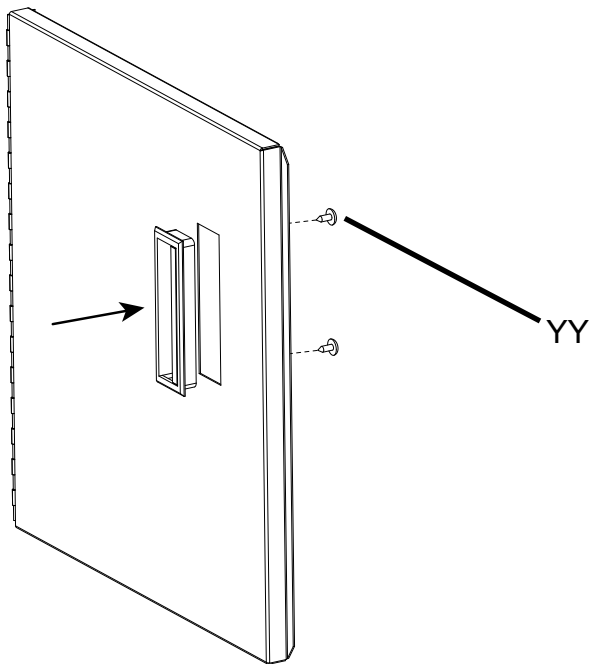

STEP 8


Attach a handle (XX) to each door with screws (YY) as shown.

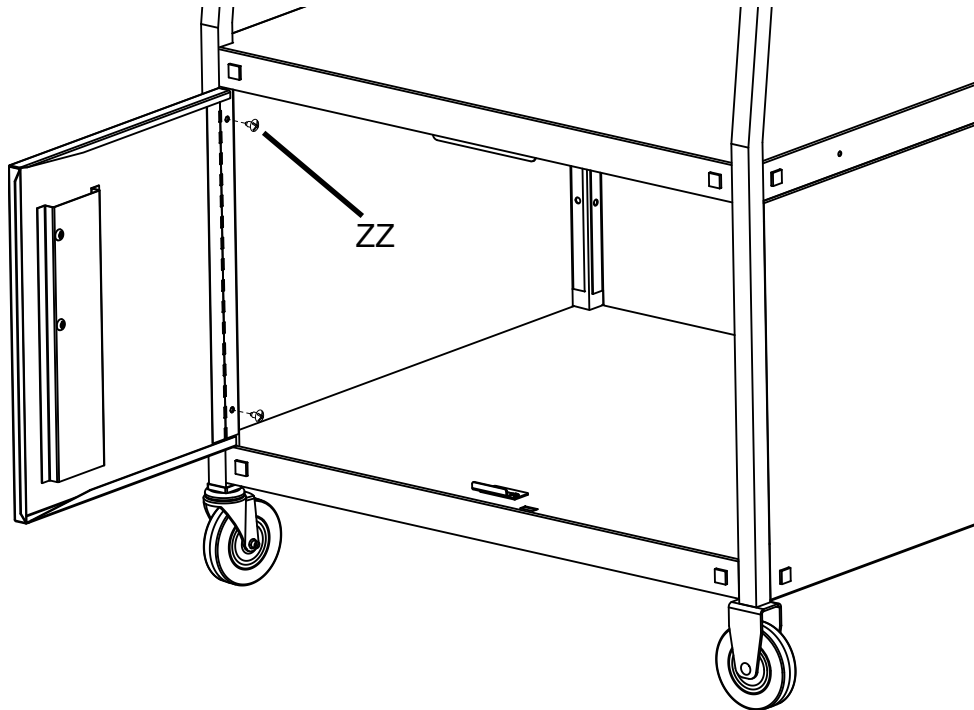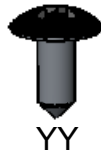

STEP 9


Attach the doors between the middle and bottom shelves with screws (ZZ) as shown. **NOTE:** Adjustments to the door stop may need to be done.



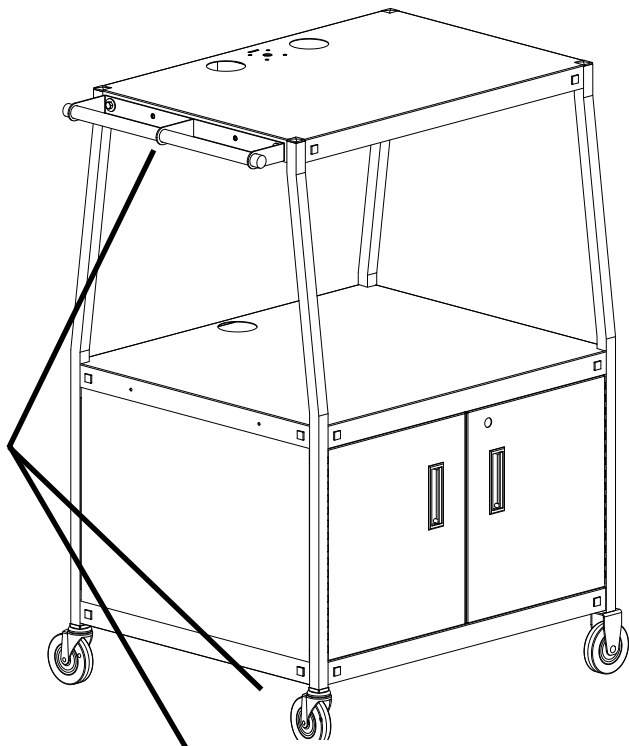



ATTACH HANDLE ON SIDE OF SWIVEL CASTERS

FIGURE 7

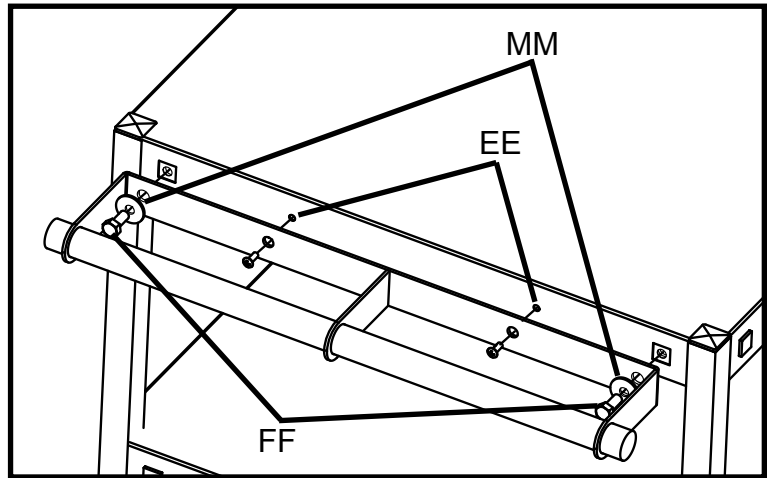


VIEW FROM ABOVE

FIGURE 8

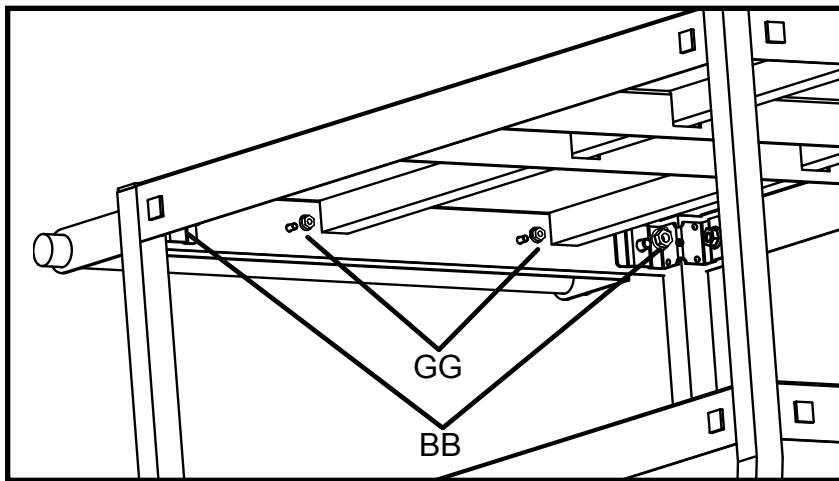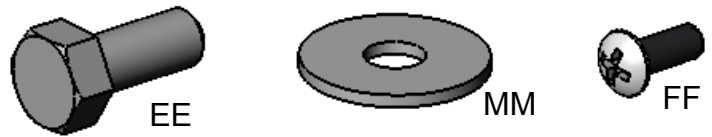

VIEW FROM UNDERNEATH

FIGURE 9

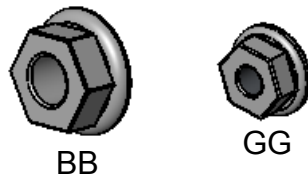

STEP 10

Attach handle assembly to the top shelf as shown in **FIGURE 7**. Make sure the handle is attached on the side of the cart that has the swivel casters. Secure in place with screws (EE) & (FF), washers (MM) and nuts (BB) & (GG) as indicated in **FIGURES 8 & 9**.

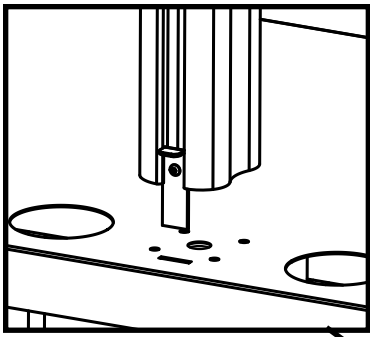


FIGURE 10



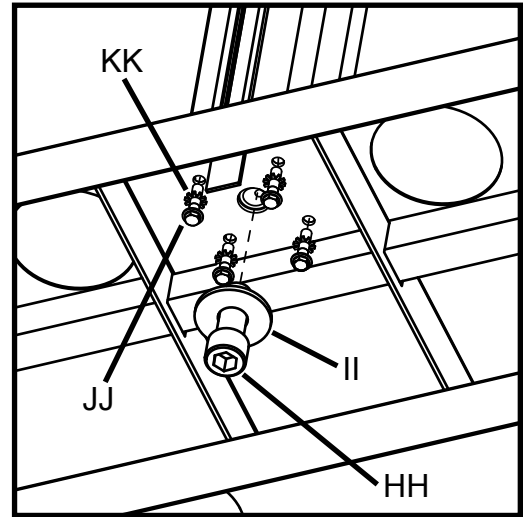


FIGURE 11

STEP 11

Attach pole to top shelf. Align pole over holes in top shelf as shown in **FIGURE 10**. Secure from **UNDER-NEATH** with screw (HH), washer (II), screws (JJ) and washers (KK) as shown in **FIGURE 11**.

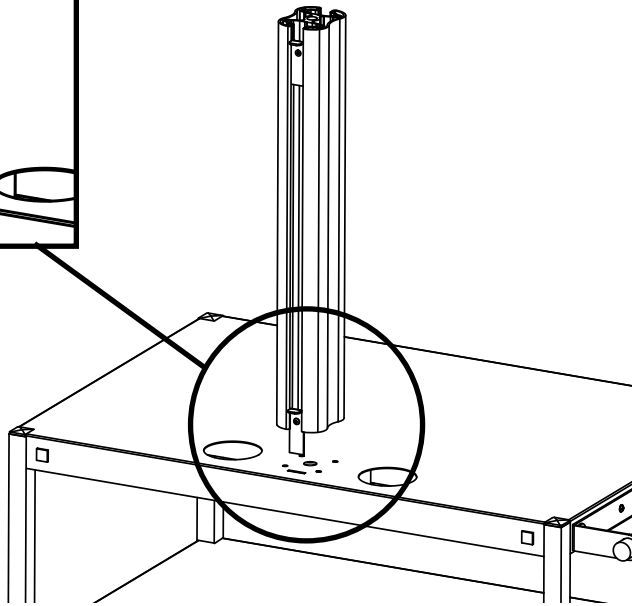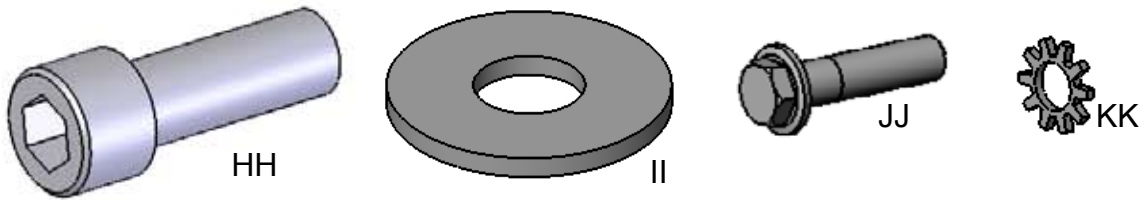


HH

II


JJ

KK

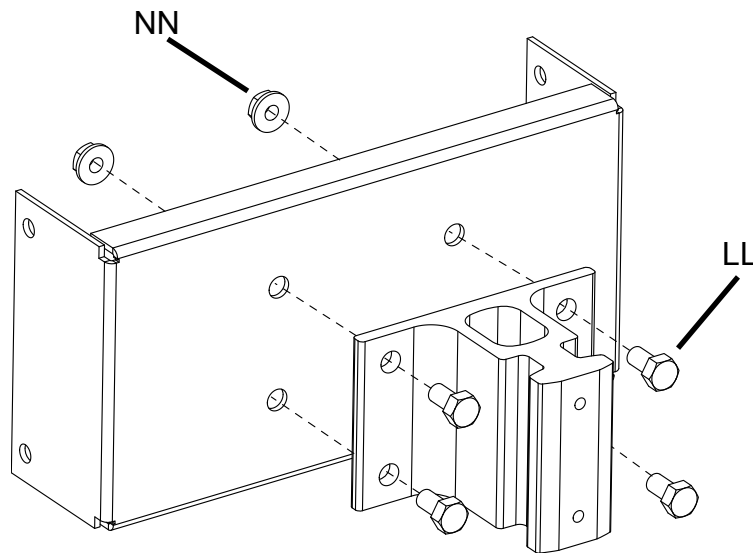


STEP 12

Attach the box swivel to the nugget with screws (LL) and nuts (NN) as shown.

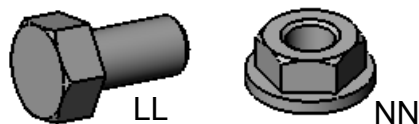


LL

NN

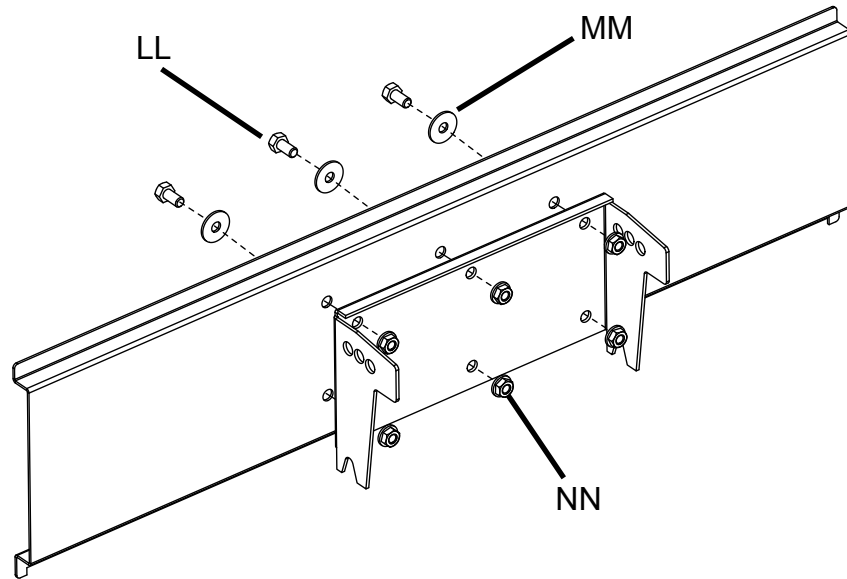

STEP 13

Attach main support to swivel bracket with screws (LL), washers (MM) and nuts (NN) as shown.

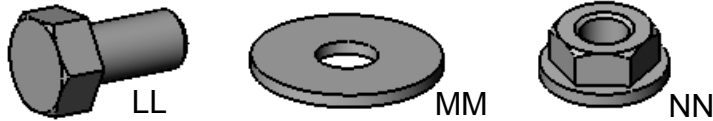

TILT ADJUSTMENTS


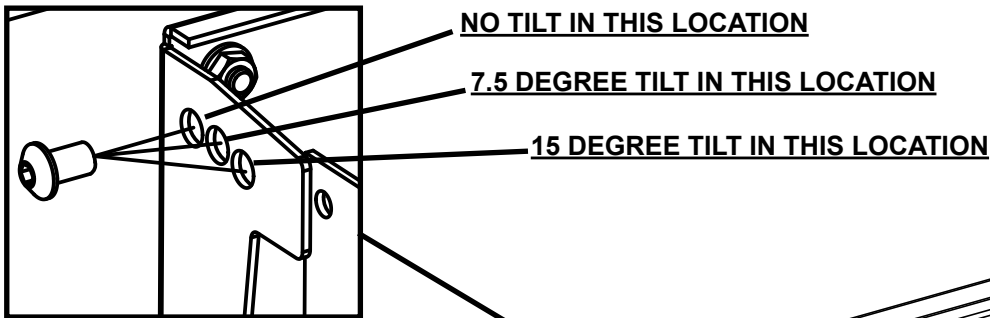



FIGURE 12



STEP 14

Loosely insert the lower spike/box assembly screws (OO) then fit the spike/box assembly notch over the screws and insert the tilt adjustment screws (OO) at the angle desired and tighten all screws. This assembly can be installed with or without a tilt. Reference **FIGURE 12** for tilt adjustments.

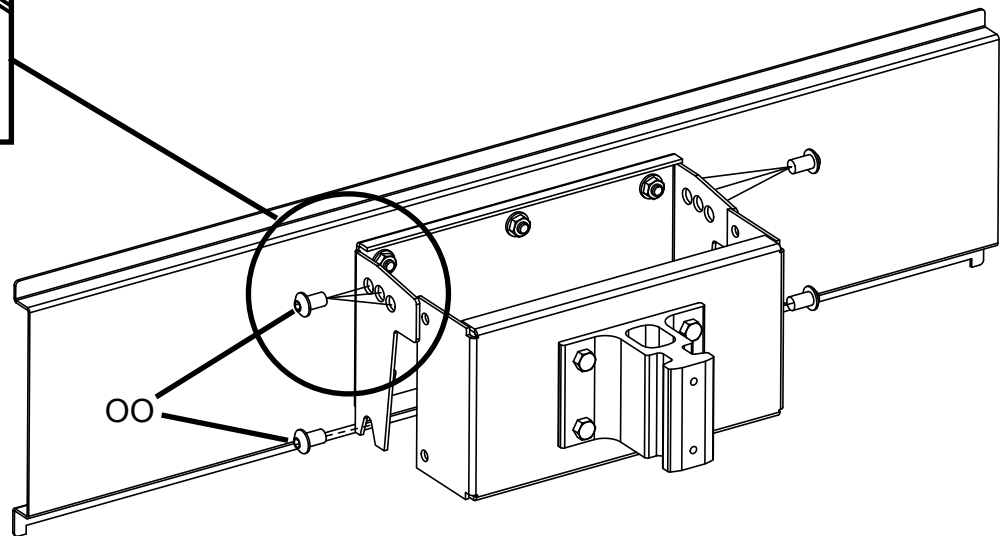

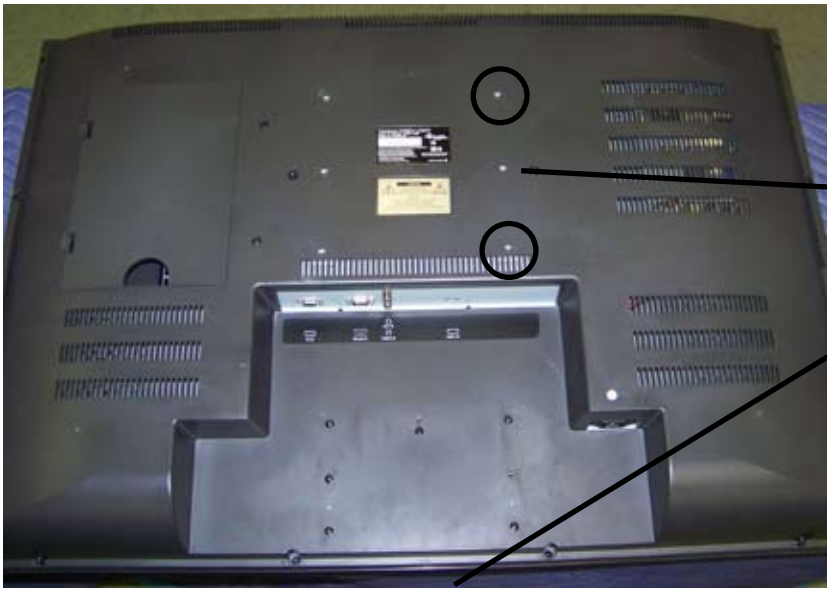

Measure the distance from the center of mount holes to the bottom of the monitor.

FIGURE 13

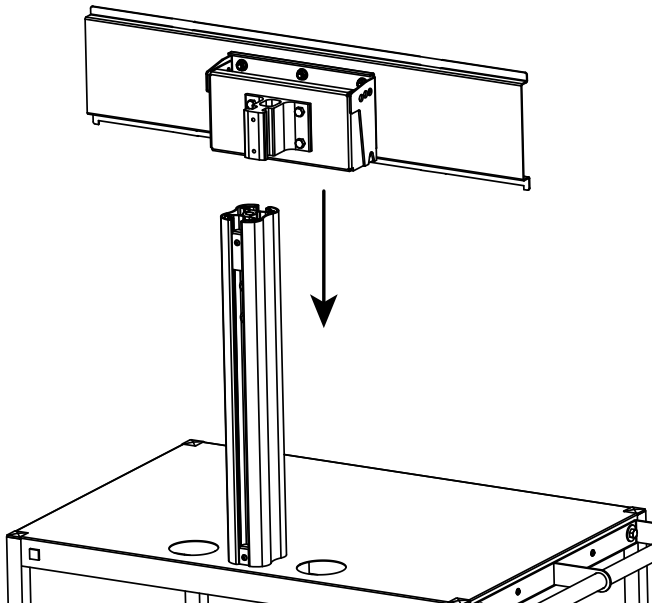


FIGURE 14


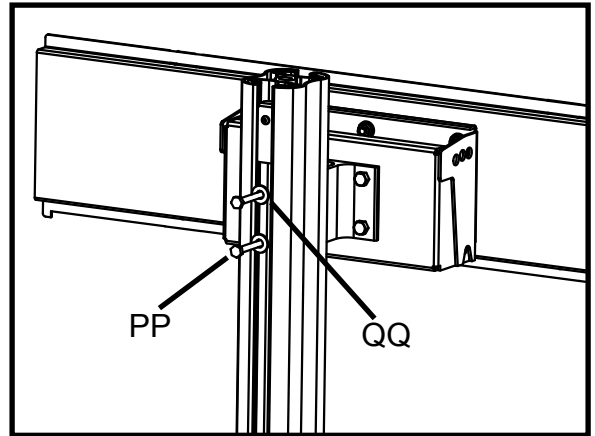


FIGURE 15

STEP 15


Roughly measure the distance from the center of monitor mounting holes to the bottom of the monitor (**FIGURE 13**). Round to the highest inch and from the top shelf, use that measurement as a guide to the location for the bottom nugget screw on the pole. Slide the nugget assembly onto the pole as shown in **FIGURE 14**. Hand tightening, attach nugget to pole with bolts (PP) and washers (QQ) as shown in **FIGURE 15**. **NOTE:** You may need to adjust the mounting assembly up or down once the monitor is hung in place. **DO NOT OVER TIGHTEN THE BOLTS.**

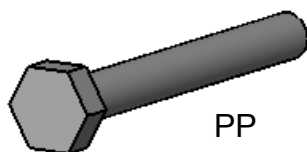

PP




QQ

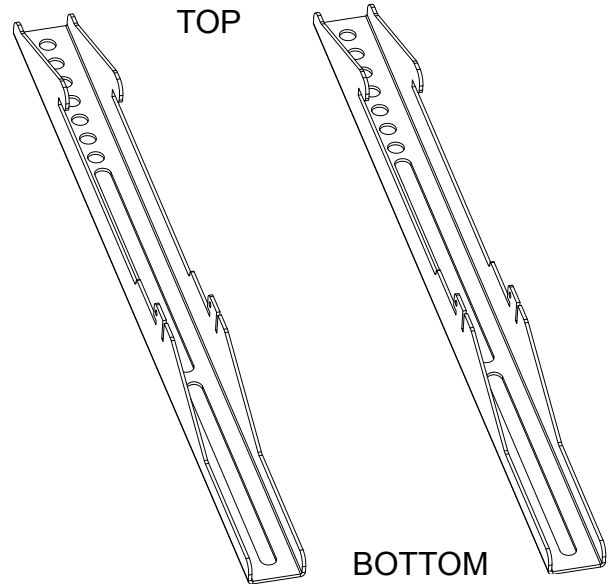

STEP 16


Attach both hook bars onto the back of your monitor using the mounting holes built into the case. A courtesy hardware pack has been provided with several metric screw sizes. You may need to purchase additional metric screws from your local hardware store for odd shaped monitors.

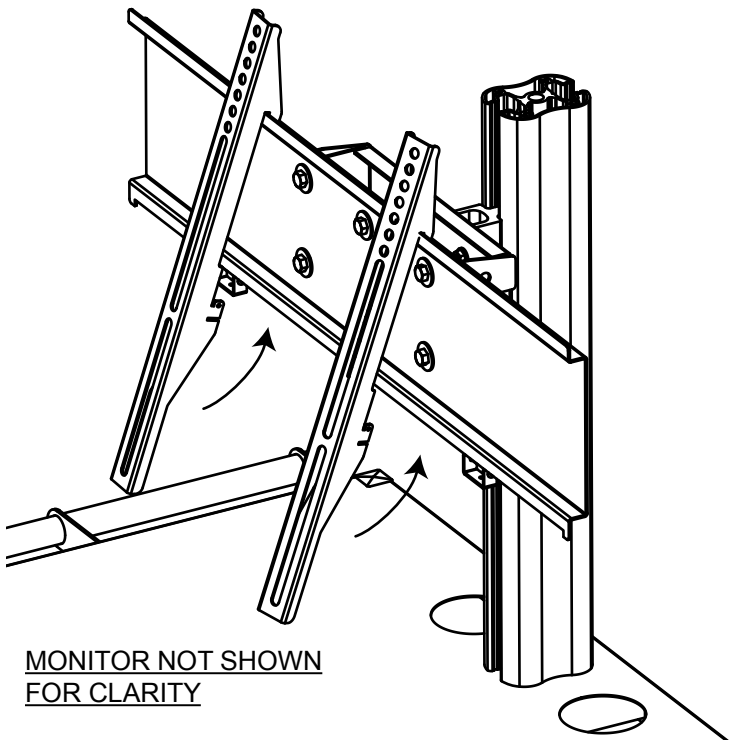

MONITOR NOT SHOWN FOR CLARITY



STEP 17

Hook monitor onto main support bar as shown. Monitor removed from picture for clarity.

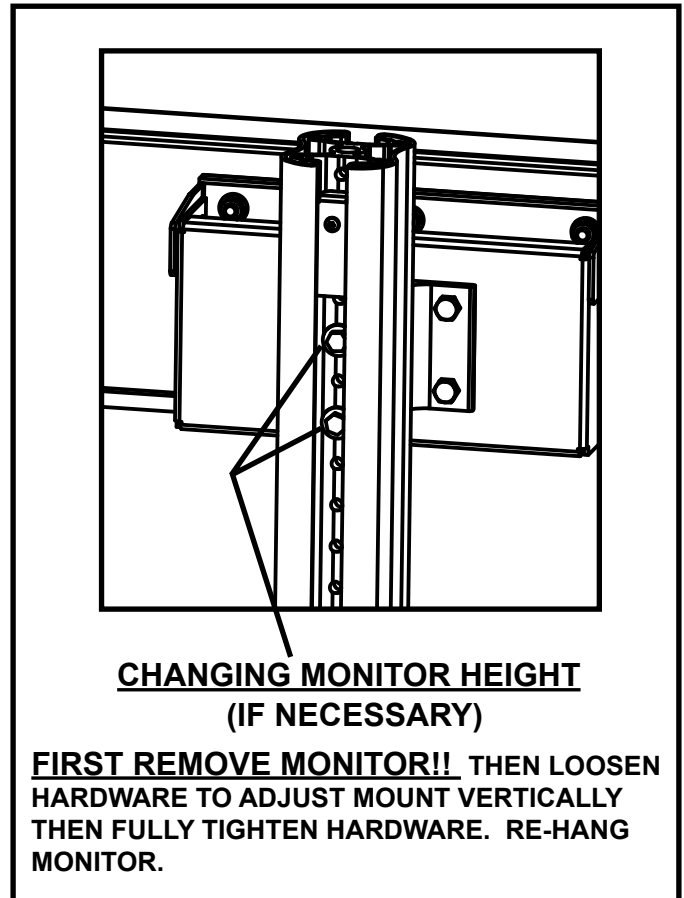


CHANGING MONITOR HEIGHT (IF NECESSARY)

FIRST REMOVE MONITOR!! THEN LOOSEN HARDWARE TO ADJUST MOUNT VERTICALLY THEN FULLY TIGHTEN HARDWARE. RE-HANG MONITOR.

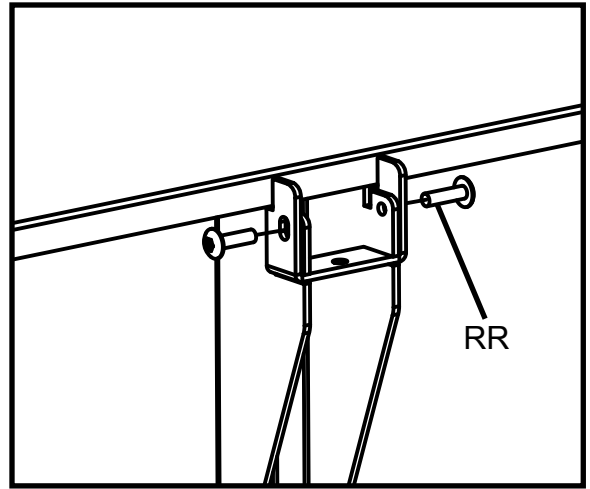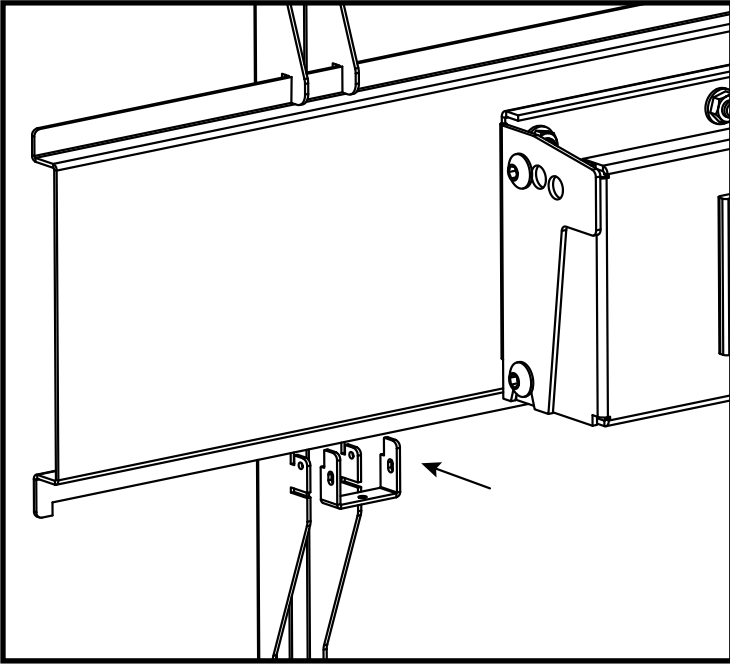

STEP 18


Attach the stop brackets to the hook bars as shown with security screws (RR) using the driver bit provided.

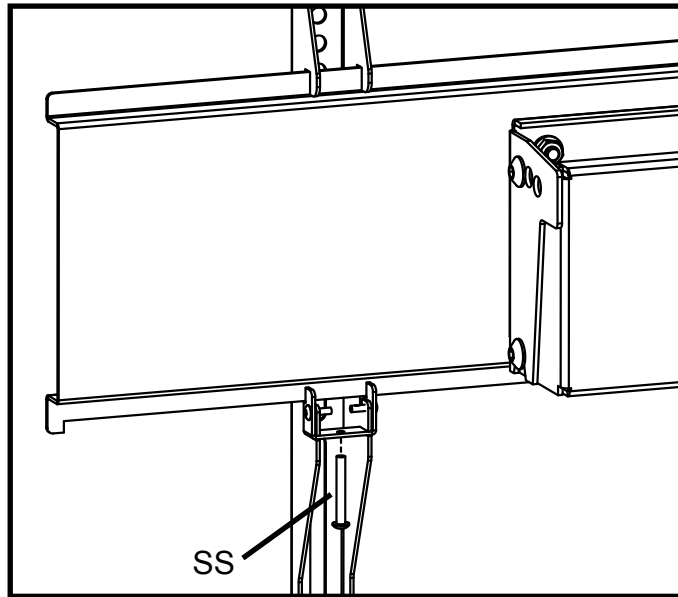


CENTER MONITOR HORIZONTALLY THEN SECURE

STEP 19


Center your monitor horizontally and then tighten in place with screws (SS).

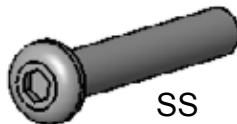

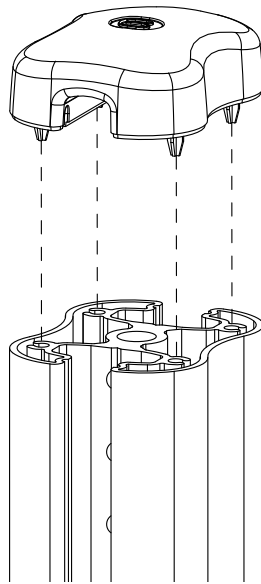

STEP 20

Snap pole cap onto the top of the pole as shown.

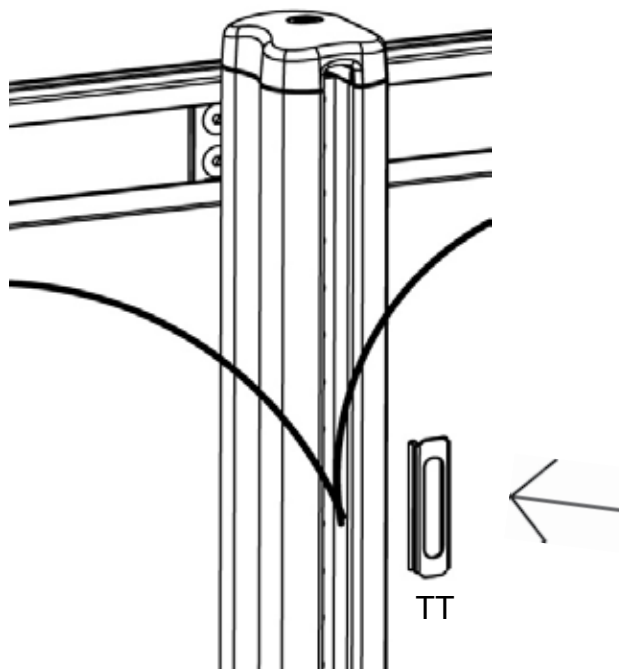

STEP 21

Feed your power cord into pole channel then snap the plastic clip (TT) inside pole to trap and contain power cord. Cords may be fed into the front or rear pole channel.

Bretford
11000 Seymour Avenue
Franklin Park, IL 60131
TEL: 847.678.2545
800.521.9614
FAX: 847.678.0852
800.343.1779

Bretford Ltd.
2 Etongate
110 Windsor Road, Slough
Berkshire SL1 2JA England
TEL: 011 44 17 5353 9955
FAX: 011 44 17 5353 9478

www.bretford.com