





BRETFORD™

FPPCPU

CPU HOLDER


Assembly Instructions

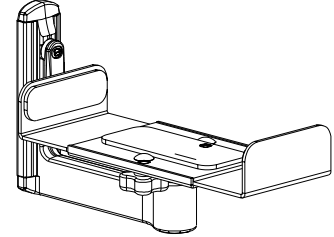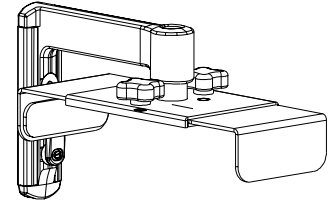

Hardware List



- 1 030-0397 3/16" Allen Wrench

Loosen Screws
Prior to Entry
Tighten to secure in
place.
Use 3/16" Allen
wrench provided.


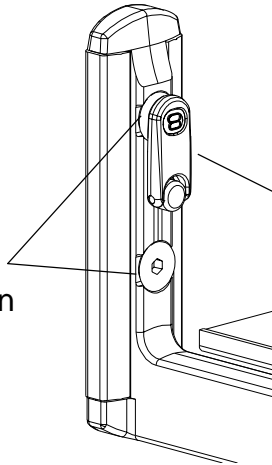


Quick Release
Lever - Pull out
to slide in

WORKING THE SPIKE

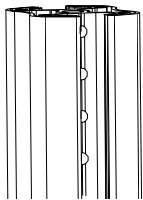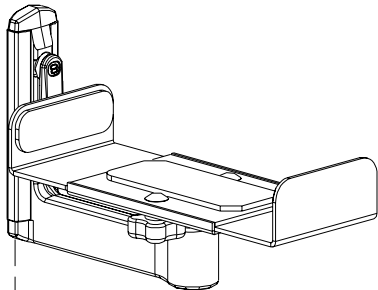

Slide one assembly (which
will be the bottom) onto the
pole as shown. Once
desired location is
achieved, tighten spike
screws.

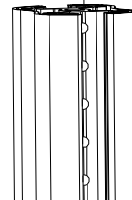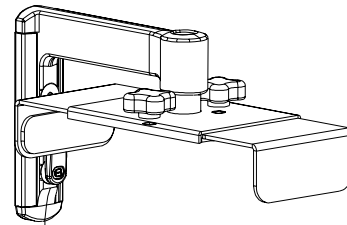

Slide other assembly onto
to pole as shown. Once
proper distance for you
CPU is achieved, tighten
spike screws.

Bretford
11000 Seymour Avenue
Franklin Park, IL 60131
TEL: 847.678.2545
800.521.9614
FAX: 847.678.0852
800.343.1779

Bretford Ltd.
2 Etongate
110 Windsor Road
Slough, Berkshire SL1 2JA England
TEL: 01753 216531
FAX: 01753 539478