
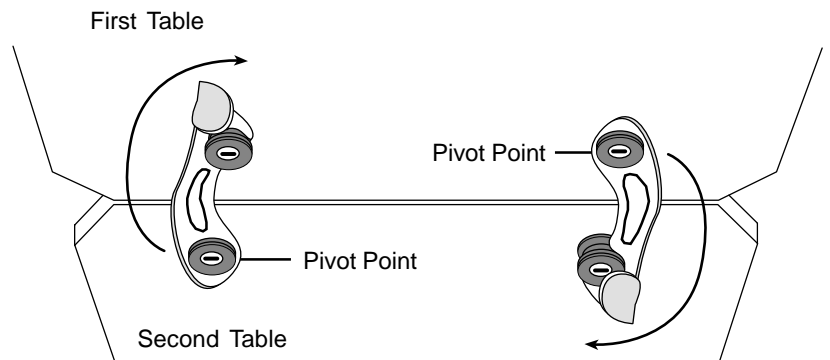
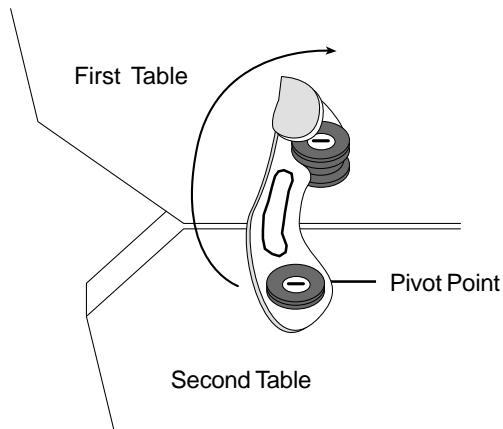
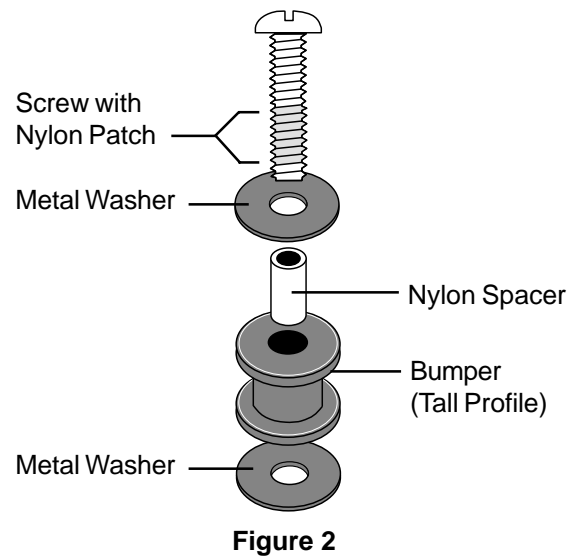


Presentation Environments®

HCLIP Quick Release Ganging Clip

Assembly Instructions

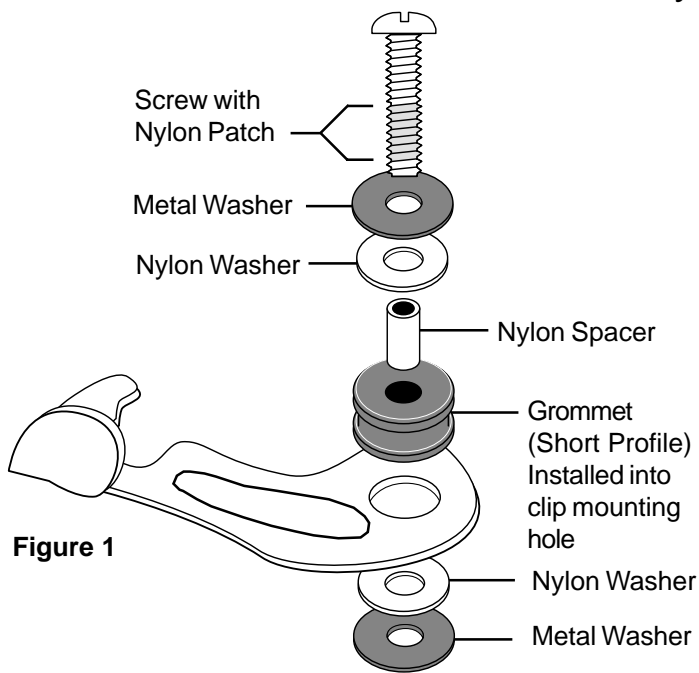

See Figure 1 and Figure 2 for proper assembly of Ganging Clip and Hub Bumper. Screw in Ganging Clip Assembly and Bumper Hub Assembly as shown in Figure 3. Do not habitually remove and replace screw, as it will cause excessive wear on the nylon patch. **Hand tighten** screws only.
 Rotate swing arms as shown and latch onto Bumper Hubs securely to connect tables side to side.

Bretford
 11000 Seymour Avenue
 Franklin Park, IL 60131
 TEL: 847.678.2545
 800.521.9614
 FAX: 847.678.0852
 800.343.1779

Bretford Ltd.
 Technology House
 7 Lake End Court, Taplow
 Bucks SL6 0JQ England
 TEL: 01628 603558
 FAX: 01628 604923