




# BRETFORD

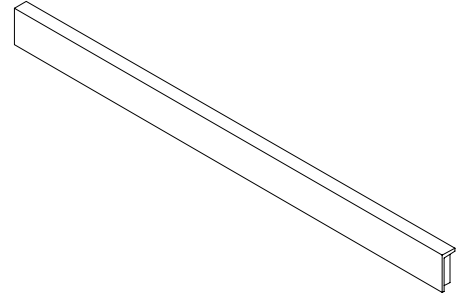

## LEGACY COLLECTION

Assembly Instructions


# TOE KICK PLATE

### PARTS LIST

Qty	Description
2	Kick Plate Brackets
1	Kick Plate



### HARDWARE LIST

Qty	Part#	Description
8	030-0258	#12 x 1/2" Pan Head Wood Screws

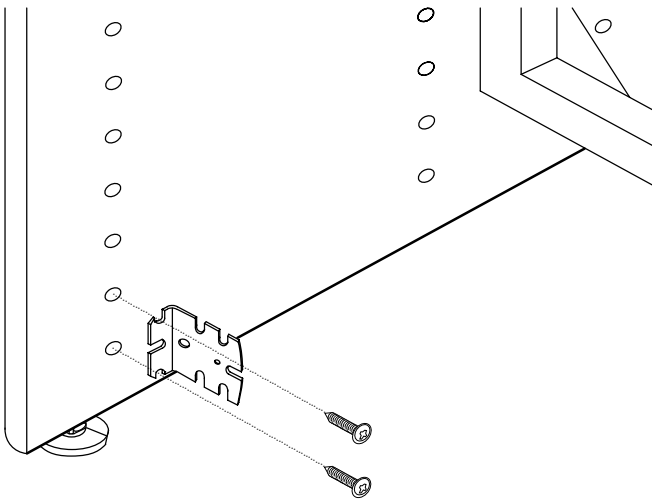

### STEP 1

Attach the kick plate brackets to the end panels with two wood screws as shown.

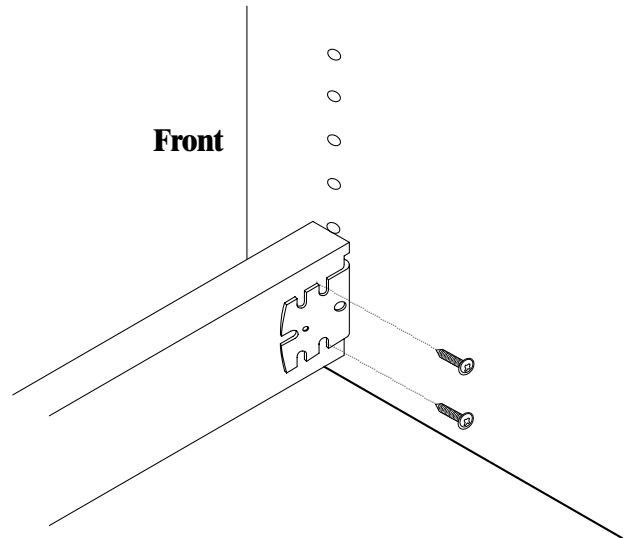

**Front**

### STEP 2

Attach the kick plate to each bracket using two wood screws as shown.

**Bretford**  
 11000 Seymour Avenue  
 Franklin Park, IL 60131  
 TEL: 847.678.2545  
 800.521.9614  
 FAX: 847.678.0852  
 800.343.1779

**Bretford Ltd.**  
 Technology House  
 7 Lake End Court, Taplow  
 Bucks SL6 0JQ England  
 TEL: 01628 603558  
 FAX: 01628 604923

[www.bretford.com](http://www.bretford.com)

Part# A11022  
Rev. 6.95 CH