



BRETFORD™

HRWT

HERE®

**WRITE-ON DRY ERASE
WALL COVERING**

Assembly Instructions

Parts List

Qty.	Part No.	Description
1	HRWT8	Write-On Dry Erase Wall Covering
	HRWT16	Write-On Dry Erase Wall Covering
	HRWT24	Write-On Dry Erase Wall Covering
	HRWT48	Write-On Dry Erase Wall Covering

Tools Required

Phillips Screwdriver
Edging Knife
Seam Roller
Smoothing Brush
Spackle Knife
Sponge

NOTE:

To ensure proper installation of HRWT Wallpaper, use a professional contractor. Bretford Manufacturing Inc. will not be held liable for improper installation. Read through the instructions thoroughly to ensure a complete overall understanding of step by step procedures.

PREPARATION OF MATERIAL:

Examine all material for pattern, quantity and quality as ordered before proceeding.

WALL PREPARATION:

HRWT wallpaper can be installed over almost any surface which has been properly prepared. HRWT wallpaper may be applied to any smooth, clean, dry surface. All loose material (old wallcovering, loose plaster, drywall nails/screws etc.) must be removed from the wall. Old vinyl wallcovering also must be removed.

Cracks should be filled with a spackling compound or patching plaster and sanded smooth. Glossy or enamel walls should lightly sanded and washed with a common household detergent. Rinse thoroughly and dry. Greasy walls should be washed with a strong ammonia solution, rinsed thoroughly and dried. New plaster must be allowed to dry per manufacturers recommendations.

Wallboard construction should have one coat of alkyd or acrylic primer/sealer applied and allowed to dry prior to installation. Imperfections in the wall may be telegraphed through the wallpaper. Be sure that the wall is properly prepared before application.

MILDEW:

On old walls where mold spores may be present, a thorough washing with chlorine bleach solution is strongly recommended. Rinse clean and dry. This will help guard against mildew.

NOTE:


If walls to be covered have bold contrasting colors or white patches on dark paint, lining paper or new paint should be applied to prevent bleed through. An alternative is to prime over the contrasts to obtain uniformity. Dark color walls should first be primed with a light color acrylic or alkyd primer, then proceed with installation.

BEFORE PASTING:


For installation over steel, oil-based primers/paints or other impervious surfaces, please contact Bretford Manufacturing Inc. A quality acrylic wall preparation must be used for proper installation and product performance. Be sure to sand any stipple or brush marks left from the primer.

PASTE:


The use of a heavy duty pre-mixed vinyl adhesive or other high quality adhesive is recommended for vinyl wallcovering.

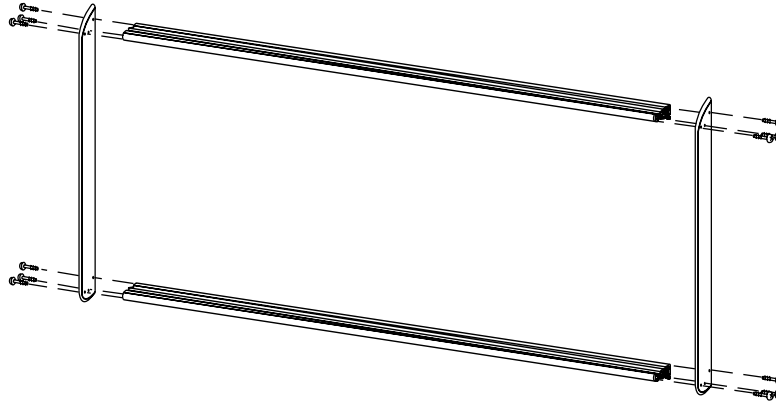



If your rail system has box end caps, remove the box end caps by unscrewing six #6 x 1 1/2" screws from each end and setting them aside. Inspect the wall for any surface imperfections as stated, make any adjustment as needed then proceed to the next step.

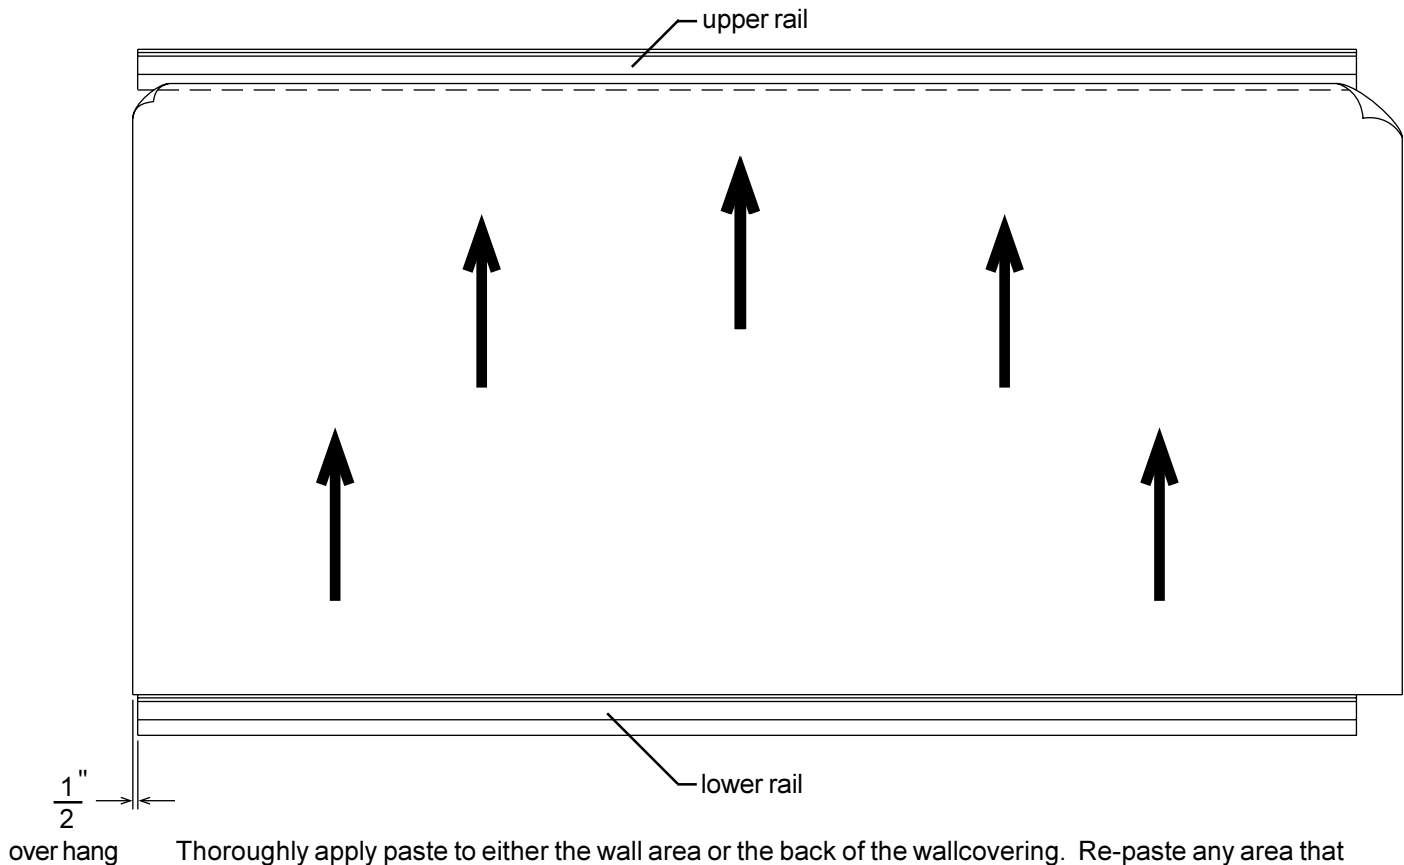

Thoroughly apply paste to either the wall area or the back of the wallcovering. Re-paste any area that appears dry or if there any delay in hanging. Start with the bottom edge of the wallcovering flush against the bottom rail top surface and at least a 1/2" overhang past the end. **NOTE: Be careful not to kink the material when handling and applying wallcovering.** If the wallcovering goes on uneven, just peel it off and reapply.

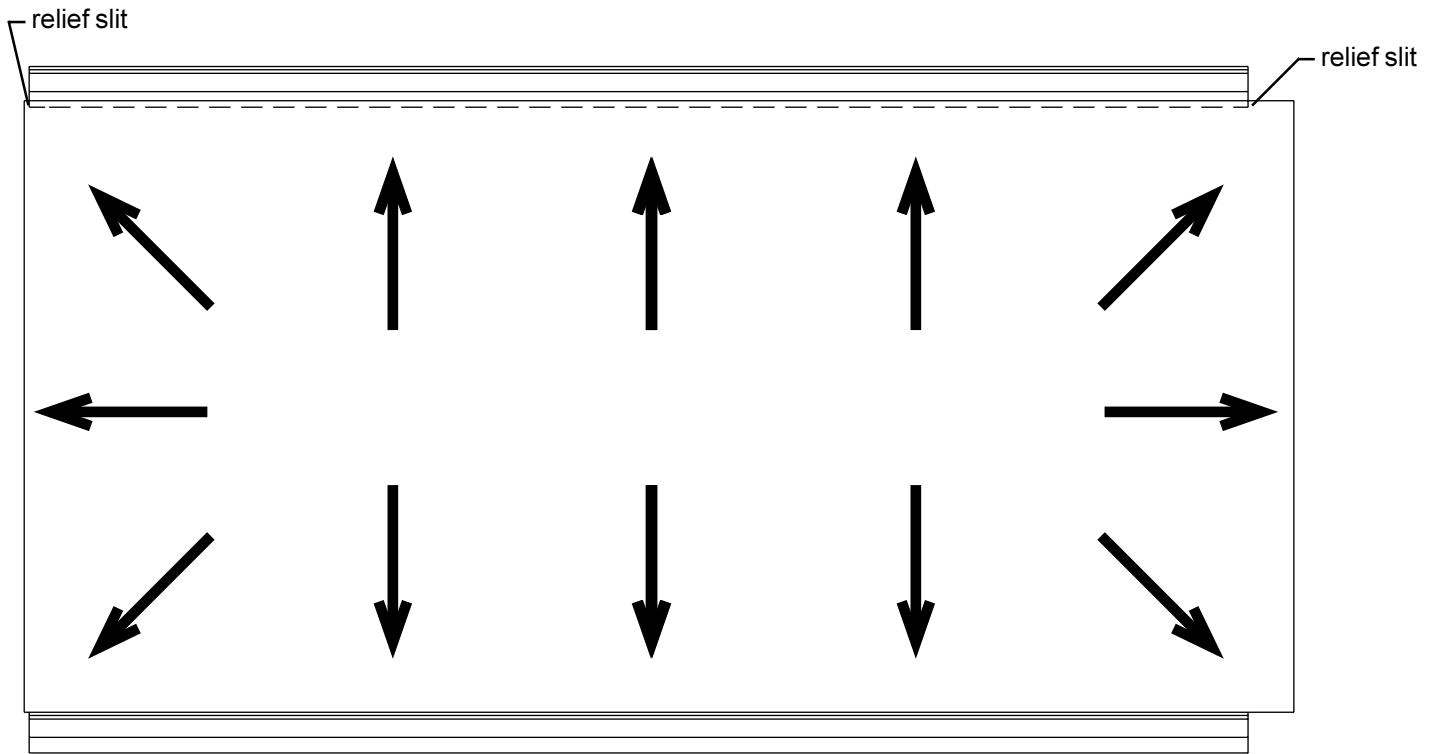


Use a smoothing brush to remove any air bubbles or paste lumps by working from the middle toward the outer edges. **Do not use a metal tool.** This will also assure complete adhesion to the wall. **Do not puncture air bubbles.** Use a wet sponge to remove any excess paste.

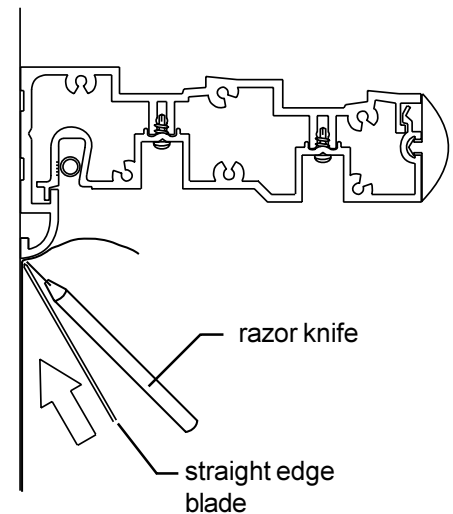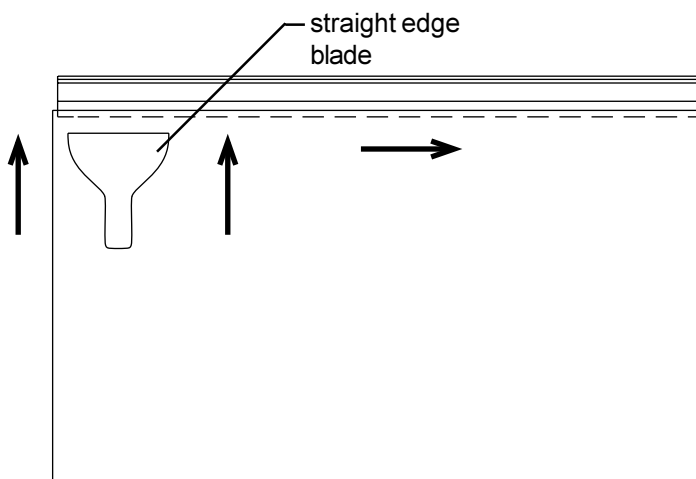


Detail 'A'

Use a straight edge blade to press the wallcovering material into the bottom edge of the top rail. Crease an edge along the entire length of rail. Use a razor blade knife to trim away the excess material while running the straight edge along at the same time (see Detail 'A'). Wipe away any excess paste with a wet sponge.

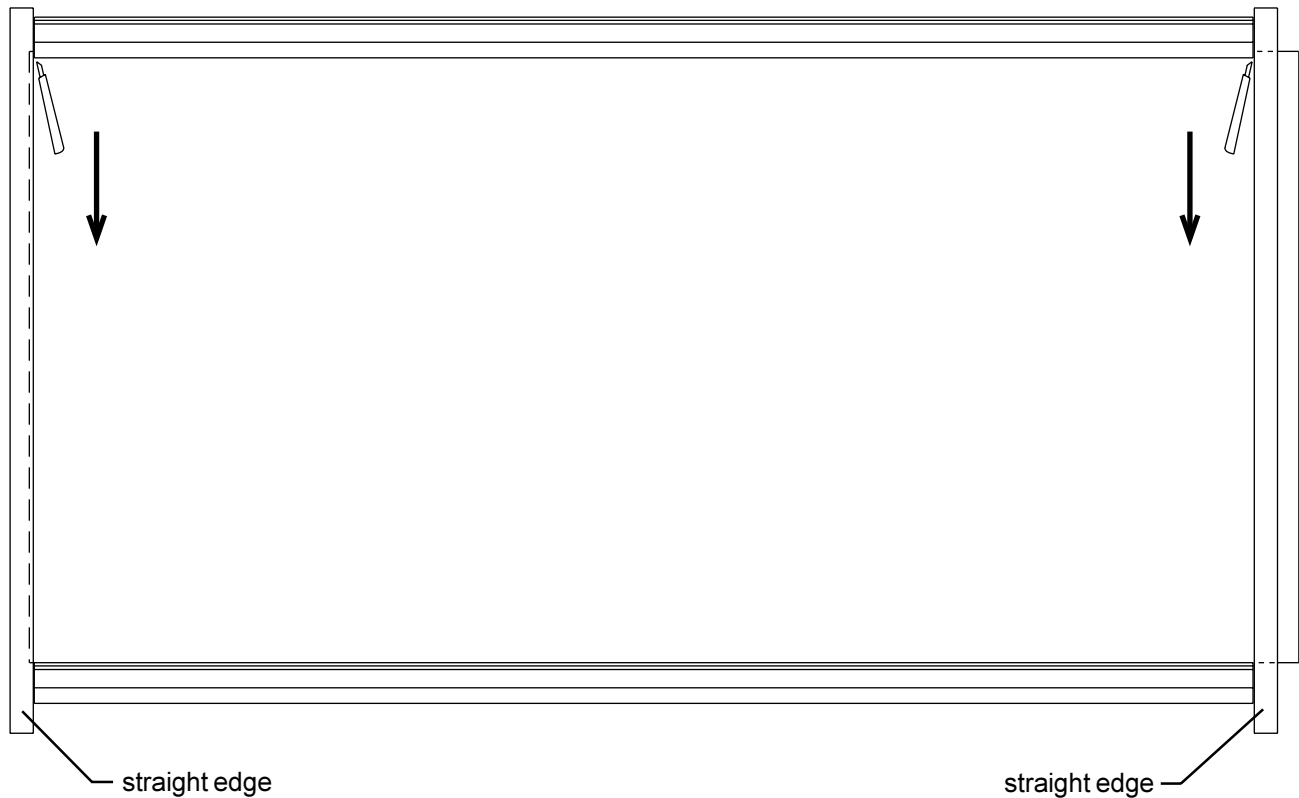

Place a 4' long straight edge along the outside ends of the upper and lower rails to trim away the overlap. Lightly roll or press the edge down. Wipe away any excess paste with a wet sponge.

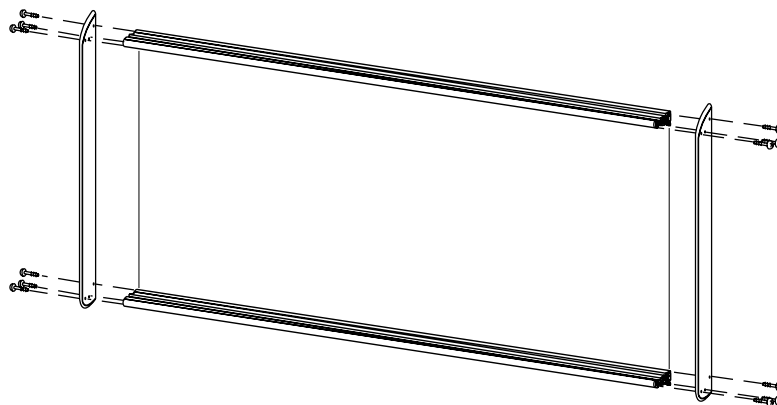

If your rail system has box end caps, reinstall the box end caps by attaching six #6 x 1 1/2" screws to each end.

If you are installing HRWT Wall Covering on a HRCN Corner Rail System, the installation is the same except extend the first wall covering 1/2" around the inside corner. Then start the second wall covering by overlapping the first wall covering.

Bretford
 11000 Seymour Avenue
 Franklin Park, IL 60131
 TEL: 847.678.2545
 800.521.9614
 FAX: 847.678.0852
 800.343.1779

Bretford Ltd.
 Technology House
 2 Etongate, 110 Windsor Road
 Slough, Berkshire SL1 2JA England
 TEL: 01753 53 99 55
 FAX: 01753 53 94 78

www.bretford.com

Part#031-3384
 Rev. 03.23.04 CH