





## INSTRUCTIONS FOR STARTER TABLE ANCHORING WHEN USING POWERTRAK®

### Assembly Instructions

**FOR USE ON THE FOLLOWING MODELS NO. OF  
BRETTFORD TABLES:**


**PXC, PTT, PRN, PFW, PWC, PNF, and PWV**

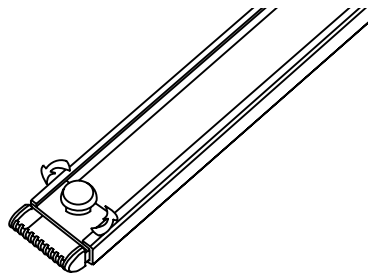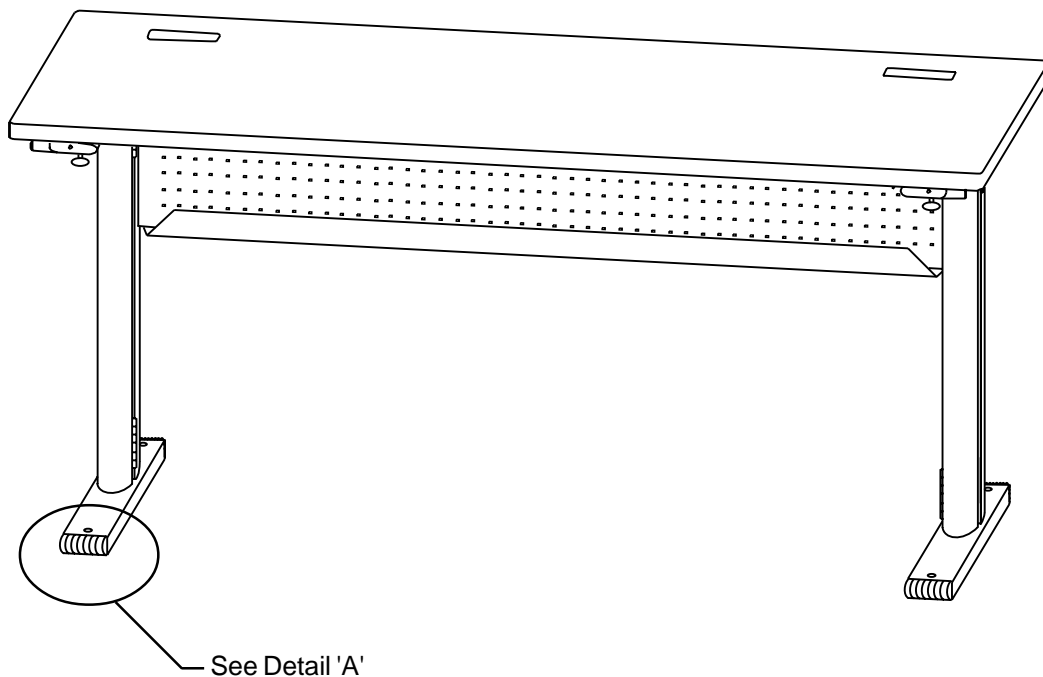

**Detail 'A'**  
(Bottom View)


### **Step 1**

From underneath the table, remove all (4) glides by unscrewing them as shown.

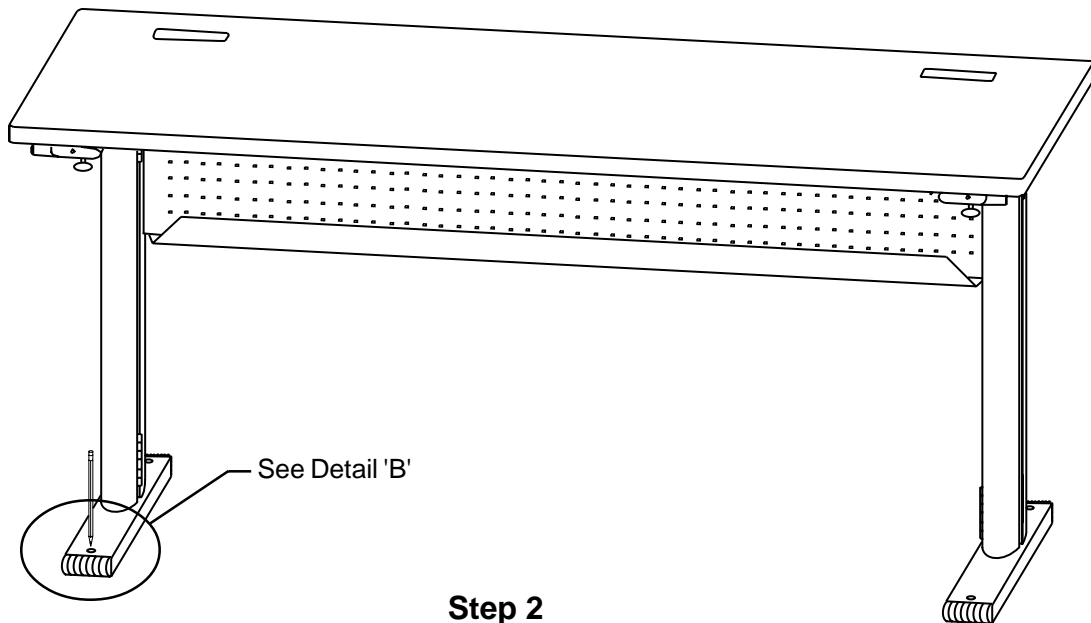


### Step 2

Determine the location for the table. With a pencil, mark through the (4) vacated glide mounting holes onto your floor to locate pilot holes.

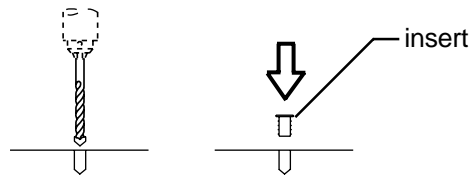

### Detail 'B'

Set the table aside to prepare the floor for drilling. Depending on your floor material, use the appropriate drill bit to drill out the (4) pilot holes at the proper depth and mount your insert as shown in Detail 'B'.

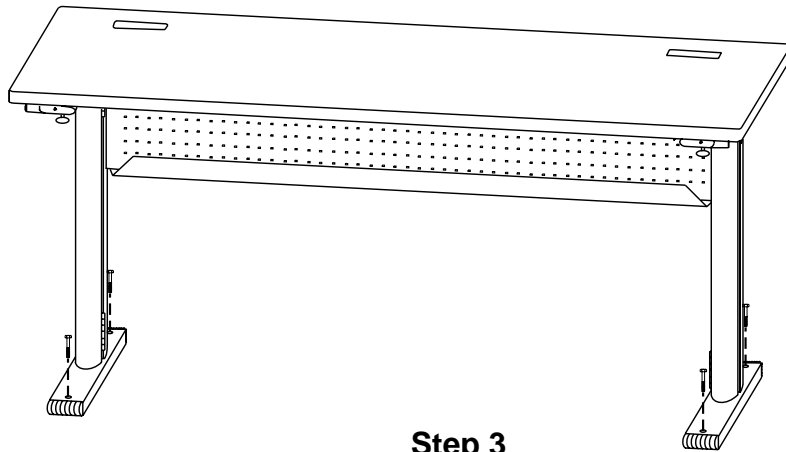

### Step 3

Install (4) #1/4" screws through the (4) glide mounting holes to anchor down the table.

**NOTE:**

**If you have tables ganged on each side, you will need (4) 3/4" long spacer tubing under the anchor table to achieve same height level.**

**Then the adjoining tables can be adjusted up to the starter table height.**

Bretford  
11000 Seymour Avenue  
Franklin Park, IL 60131  
TEL: 847.678.2545  
800.521.9614  
FAX: 847.678.0852  
800.343.1779

Bretford Ltd.  
Technology House  
7 Lake End Court, Taplow  
Bucks SL6 0JQ England  
TEL: 01628 603558  
FAX: 01628 604923