

Installation/Assembly Instructions

Please use these instructions for assembly and installation of the
PAC
(Public Access Computer)
Wall Track Station.

It is important to read the following information prior to
beginning your installation.

Parts List:

- (2) 31.5" metal tracks
- (2) slide mounts
 - One Slide mount for top track - Flat Screen Monitor Arm
 - One Slide mount for bottom track - CPU Holder
- (1) LCD 17" Monitor Mount
 - Installation Hardware Pack Included in Box
 - VESA conversion plate included
- (1) Keyboard Platform with Slide mount unit attached
 - Installation Hardware
 - Cord Management and Mouse Storage included
 - Keyboard Wrist Rest and Mouse Pad
- (1) CPU Holder
 - Installation Hardware Pack Included in Box
- "L" Shape mounting bracket
 - 4 screws and nuts attached to bracket

PAC Wall Station Photo
is included on inside page of Assembly Guide.

IMPORTANT:

Do not lose any of the parts or packs when the boxes are opened.



BRETFORD



BRETFORD

Assembly

- Decide on height of upper track
 - Base decision on desired height of flat screen monitor
 - Allow for varied vertical height adjustment along track
 - Base decision on desired height of keyboard platform
 - Allow for varied vertical height adjustment along track
- Decide on height of lower track
 - Lower track does not have to sit against/meet the bottom of the upper track
 - Base decision on desired height of CPU holder
 - Base decision on computer wire lengths
- Mount UPPER TRACK with slide mount adjustment holes toward the RIGHT to allow for vertical height adjustment of keyboard platform and the monitor mount
 - Use screws supplied with track to mount to wall stud*
- Mount LOWER TRACK with slide mount adjustment holes toward the LEFT to allow for vertical height adjustment of keyboard platform and the monitor mount
 - Use screws supplied with track to mount to wall stud*

*weight of computer components and track require mounting of unit to wall stud




- Mount flat screen monitor mount to rear of flat screen monitor
 - Use screws and VESA plate supplied with mount (if necessary)
- Mount the monitor mount to the track slide mount
- Assemble keyboard tray with mouse platform mounted to left or right side
 - Install the wrist rest and mouse pad on the platform
- Install "L" bracket to slide mount
 - Use screws and nuts supplied on bracket
- Install "L" bracket to top of CPU Holder
 - Use screws supplied with CPU Holder
- Slide "L" bracket with CPU holder attached down track to desired height
 - Tighten slide mount screw into mounting hole (on left)
- Slide keyboard platform down upper track to desired height
 - Tighten slide mount screw into mounting hole (on right)
- Slide flat screen monitor mount down upper track to desired height
 - Tighten slide mount screw into mounting hole (on right)

BRETFORD

1100 Seymour Avenue Franklin Park, IL 60131 USA

800-521-9614 ~ 847-678-2545

FAX 800-343-1779 ~ FAX 847-678-0852

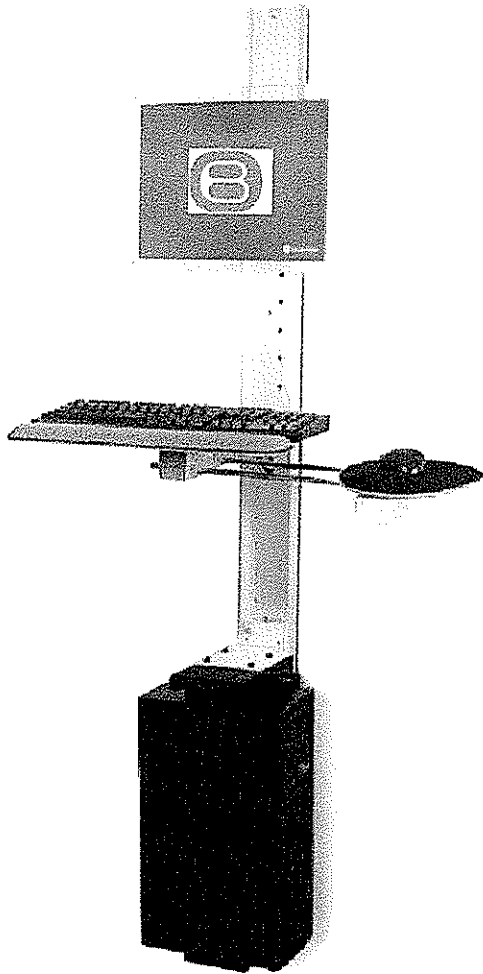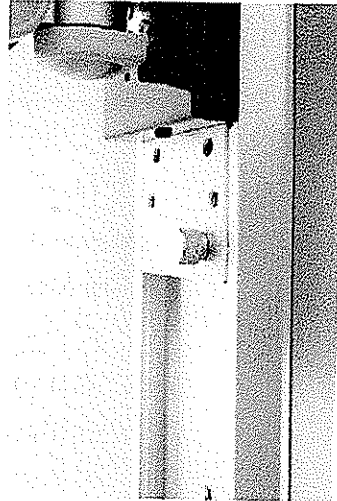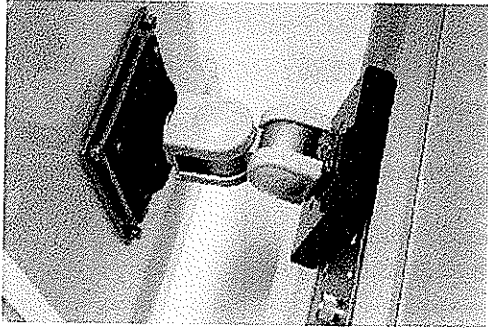

Limited Warranty

Product support and contact information

Please visit our website at www.esiergo.com for the most current product support and contact information

Limited Warranty

ESI Ergonomic Solutions warrants this product to be free from defects in materials and workmanship for a period of five years from the date of purchase. This warranty is limited to repairing or replacing, at ESI Ergonomic Solutions' sole option, any such defective products. To obtain service under warranty you must obtain a Return Authorization (RA) number from an ESI Ergonomic Solutions representative. The product must be returned with transportation charges prepaid and must be accompanied by a brief description of the problem encountered and proof of date and place of purchase. This warranty does not apply to equipment which has been damaged by accident, negligence, or misapplication or has been altered or modified in any way. EXCEPT AS PROVIDED HEREIN, ESI Ergonomic Solutions MAKES NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some countries do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser. EXCEPT AS PROVIDED ABOVE, IN NO EVENT SHALL ESI Ergonomic Solutions BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. Specifically, ESI Ergonomic Solutions, is not liable for any costs, such as lost profits or revenue, loss of equipment, loss of use of equipment, loss of software, loss of data, costs of substitutes, claims by third parties, or otherwise.



BRET FORD